


## A1200\_Keyb\_MPU FW download connection

### AVR STK500 pinout

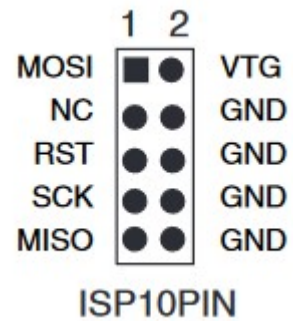

Fuse settings:

LFUSE = 0xe2

HFUSE = 0xd9

